Fiber Optic HDMI Cable -User Manual-

1. Product Overview 1.1 Safety Precautions

Welcome!

- All safety instructions should be read and understood before the unit is operated.

- The owner's manual and safety instructions should be retained

Home • Classroom • Commercial

Thank you for purchasing our product. This manual will help you install and use it.

for future reference. - Unplug this unit from the AV devices before cleaning. Do not use

liquid or aerosol cleaners. Use a damp cloth only. - Keep away from wet, magnetic, and flammable surfaces or subst -ances.

- Do not place any heavy objects or equipment on top of the unit. 1.2 Product Description
 - This product is easy to use, securely connected, and suitable for any location where high-definition video displays, such as home video distribution, conference room presentation
- systems, room projection systems, digital signage. - Fiber optics provides the speed and bandwidth needed for the

best picture quality for high definition video; supporting the long

- No extenders, balkans or amplifiers are needed free allowing them to be installed with multiple cable pulls, providing the flexibility for

- Supporting 18Gbps and 4K@6OHz perlormance.

4.8 mm

remote component locations.

Specifications

Audio

Jacket diameter

distances required in commercial video solutions.

Data rate 18 Gbps Resolutions up to 4K@60Hz/fps(YUV 4:4:4) HDCP 2.2, EDID, CEC Supported features 3D, HDR, Deep Color

32 uncompressed Audio Channels; 1536 kHz

- Designed to solve the installer's common problems with long distan -ce HDMI and concealed installations in home and business.

30 pounds Cable sustained tension 32°--- 122°F (0°---50°C) Operating Temperature 1. 3 Installation Important: Please use the installation procedure below. Improper or no operation may result if the start-up sequence is not correctly 1. Carefully unpack the contents of the shipping group. 2. Turn off the entire system before connecting. 3. Plug directly the Tx (Source) connector of DTECH cable in the HDMI output port of your video source (DVD, Blu-ray,game console box,

4. Plug the Rx (Display) connector of DTECH cable to the HDMI input port of display (HDTV, LCD screen, Projector, etc). Make sure

When encountering product quality problems, first consult our

Product connection diagram

HD game consoles

Non-professionals are not allowed to disassemble the casing to avoid

set-top boxes

display terminal

them as this may cause deterioration in signal Iransmission

5. Turn power on the source and the display. Note: Do not connect any intermediate cable or adapter between

after-sales department

damage to the product.

performance.

cable is firmly inserted.

etc). Make sure cable is firmly inserted.

Laptops

monitor

set-top boxes

projector

III

2. Troubleshooting 2.1 The display shows only black screen. -Ensure that the HDMI ports are firmly plugged in to the source and display. -Ensure that the Video source (Tx) is connected to the video source and Display (Rx) is connected to the display. -Check if the source and display are powered on and properly booted. -Re-boot up the system while connecting the optical HDMI cessary.

Waterproof shell

Step1

Step2

Step3

Date of purchasel: User telephone User address

Customer Information

Model:

Distributor Agency address

	0 ,				
User telephone:		one:	Dealer stamp valid		ıp valid
Intenance Records					
	Repair times	Date	Fault	Treatment measures	Repair work NO.

	extension module.
2.2	Screen is distorted or displays noises.
	-Check if the graphic resolution is properly set for the sources.
	For PCs, go to the display properties of OS and tap the settings.
	For other AV video source, refer to the owner's manual to adjust
	video resolution.
	-Reboot the system. Disconnect the optical HDMI cables if ne-

Step1 Step2

First open the head cover, then fully open the tail cover, pull the cable to the desired length, then tighten the tail cover to secure the cable.

D

Recycling process

After using the cable, pull the cable back from the tail position to the appropriate position in the waterproof case and tighten the tail cap.

Use process

Product Warranty Card

Recycling completed